



 



Multi functional alarm instructions

Related products



Function Introduction

- 2.1. mainly anti-theft alarm and doorbell function, the maximum number of receive 32 wireless sensors and remote control
- 2.2. when did not disarm the alarm and open the door / window or some activities in the infrared deployment zone, will be issued a high alert sound loudness 110dB.
- 2.3. when the doorbell mode open / or activities in the infrared deployment zone, will emit atone buzz two times.
- 2.4. Press the remote control to unlock  key on behalf of the disarm, if the alarm in the alarm Press this key to cancel the alarm sound  Press the  lock key to indicate the fortification, Into the fortified state. Armed state under the  disarm, disarmed state Press into the doorbell mode, this time after the magnetic door and related probe trigger Are issued "buzz" sound. Doorbell mode can press  release or press  lock In the disarmed state, press the remote control S key to check the alarm time Set, the alarm time can be set to 10 minutes, 20 minutes, long ring The system default alarm time is 10 minutes

On the code set

- 4.1 power host ring "beep" sound, power within 15 seconds for the code mode. On the code mode, press the remote control any key to launch once, or trigger the door, passive infrared sensor and the like, the host ring "Di Di" twice that the success of the code, ring "beep" sound has beencode. 15 seconds after the host ring long "tick" sound. Save the data and exit the code. To continue to learn, as long as the host to re-power, repeat the above steps can be.
- 4.2. The host can learn up to 32 accessories, and when more than 32 accessories automatically clear the first learning accessories.

Installation is use

- 3.1. will plug the hole and end host Jack line connected, then the power supply and 220V electric power connection, the host will issue a "beep" sound, 15 seconds for the code model, the code. 15 seconds after the exit to the pattern of related products, the host to enter the standby or last set.
- 3.2. Menci installation: the end of the antenna with a magnetic door Installed in the designated door or On the window, another long door is mounted on the door or window of the door (inside the house) installation)
- 3.3. Passive Infrared Installation: The brackets are placed in the walls of the alarm area On (about 15 meters from the ground height), then the coupling head and red line set in one From the end of the bracket associated with the joint, according to the need to adjust the angle (In-house installation).
- 3.4. Doorbell installed in the door, the general height of 1.5 meters or so, (Outside the installation).

Be careful!

Increase the new remote control, the probe must be with the host code, After the success of the code can be used. (Lost related products, It is recommended to delete all the code, re-code). Long press the host on the complex Bit key for 5 seconds will clear all the code data, need to be careful operati

- 4.3. Delete all the ID of the code, that is, clear all the host code information. Long press the host on the reset button for 5 seconds, will clear all the code information, then all devices can not be used.